



AC-6 CULTIVATOR

PARTS LIST AND INSTRUCTIONS


ASSEMBLING

The cultivator is shipped complete in one carton. Mount the side rails to the center rails. They may be mounted in either the inside or outside set of holes, depending on the work to be done. Now mount the adjusting plates on the center rail. Fasten the adjusting arms to the side rail and the adjusting plates as shown. Now mount the shovel and standard assemblies and gage wheels.

ADJUSTMENTS AND OPERATION

The width of the cultivator is adjusted by loosening the center bolt in the adjusting plates and sliding the plates forward or backward. Additional width may be obtained by using the outer set of holes. The depth may be controlled with the gage wheels.

Note: KEEP ALL NUTS TIGHT.

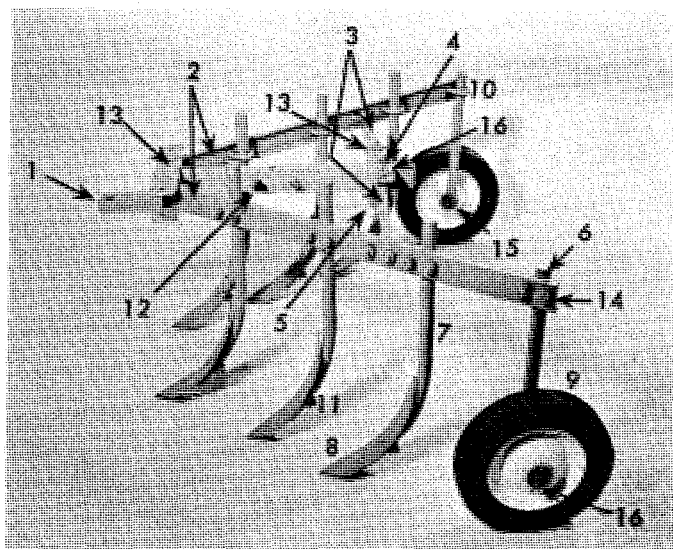

There is provision for a center shank which may be used for between row cultivating and furrowing. Remove one front shank and move the other into the slot between the center rail.

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	NO. REQ.	REF. NO.	PART NO.	DESCRIPTION	NO. REQ.
1	1924	Cent. Rail Frame Assy.	1	10	1293	U-Bolts	10
2	1925	Side Rails L & R	2	11	1069	Plow Bolt w/nut	6
3	1926	Adjusting Arm	2	12	1294	Carriage Bolt w/nut	2
4	1927	Plate Adj. Top	1	13	1295	Carriage Bolt w/nut	5
5	1928	Plate Adj. Bottom	1	14	1039	Lockwasher	33
6	1929	Standard, Gauge Wheel	2	15	1186	Wrought Washer	4
7	1930	Standard Shovel	6	16	1002	Cotter Pin	2
8	1931	Shovel, Cult.					
9	1702	Wheel, Gauge					

Note: All fasteners are cadmium plated to help prevent rust.
All nuts are $\frac{3}{8}$ " so only 1 wrench is required.